## Settings players to work with your displays and audio systems



PHT Media Server must be ON and connected to your network. Set static IP address for the server.

Connect PHT Player by HDMI cable to your display, connect to Network and power. It should be ON after 12÷18 seconds, depends on your network. Player should automatically adjust itself to display resolution.

If not, use remote or connect mouse and keyboard and go to: System > Settings > System > Settings level and change it to "Expert". Go to Video output and set HDMI as the output and chose proper resolution – if necessary.



Go to Audio output and set audio according to your equipment and its ability to process audio signals.

lence	System - Settings	
	Audio output device	HDA Intel, VIZ E43u-D2 on HDMI #
deo output	Number of channels	2
udio output	Output configuration	Optimize
	Stereo upmix	
put devices	Maintain original volume on downmix	LIP
rnet access	Resample quality	Alway
	Keep audio device alive	New
ower saving	Play GUI sounds	
Debugging	Enable passthrough	HDA Intel, VIZ E43u-D2 on HDMI
	Passthrough output device	
Master lock	Dolby Digital (AC3) capable received	that has been decoded such as mp3.
	Select the device to be used for playback of	audio that has even

You can use WMC remote or App

Remote Apps for phones and tablets offer two way communications with players.

The best remote App for Android phones is "Kore": <u>https://play.google.com/store/apps/details?id=org.xb</u><u>mc.kore</u>.

For iPhones try: https://itunes.apple.com/en/app/official-xbmcremote/id520480364 Or "SYBU"

Enjoy your system.