






firstly, disconnect the TFT cable from the hub PCB on top of the motor housing and cut the cable tie that secures it to the TFT/motor arm. locate the screw as show on the left and remove.

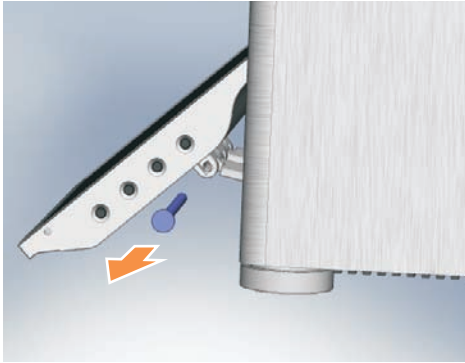


remove hinge pin as shown from the opposite side.

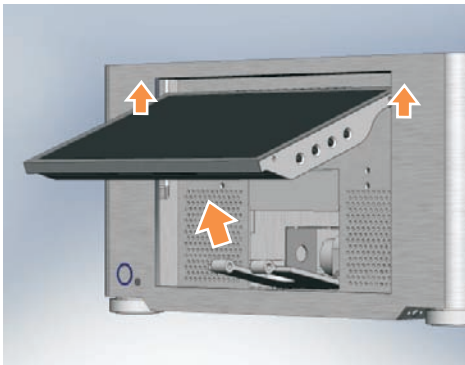

swing TFT housing away from the motor arm and roll upwards toward the top of the case until it almost touches.

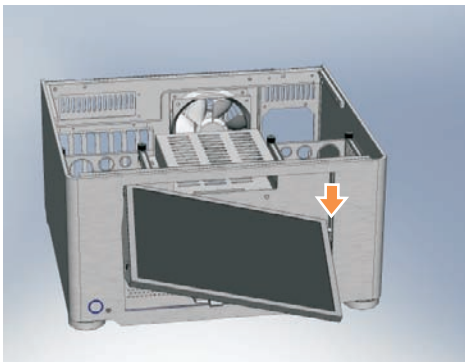

slide one side only of the TFT downwards as shown, until you see the roller bearing come free from the runner.

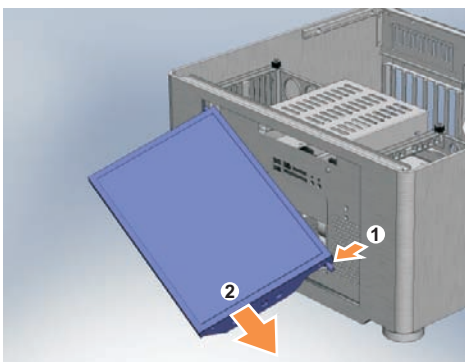

carefully (DO NOT FORCE) pull the right side slightly, so the bearing totally comes clear of the chassis (1), and then slide the whole TFT housing to the right, freeing the roller bearing on the opposite side.

To install the TFT housing, reverse the above procedure.